

CIRCUIT BREAKER CONTROL SWITCHES

ESCUTCHEON


CONTACTING DIAGRAM

WIRING DIAGRAM

Part No. 2636D


Double-pole single-throw
contacts normally open

Handle: Pistol-grip
Spring-return

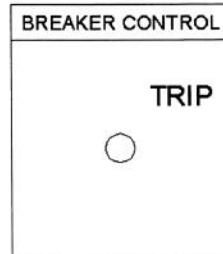


Code 115 - 20

DECK	CONTACTS	POS.	
		normal	TRIP
1	12-13		X
	16-17		X

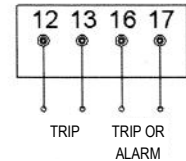


Part No. 2638D

Handle: Pistol-grip
Spring-return

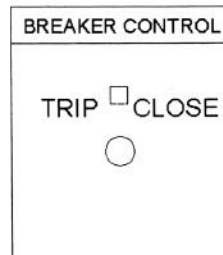


Code 118 - 3

DECK	CONTACTS	POS.		
		TRIP	normal	CLOSE
1	11-18	X		
	16-17			X

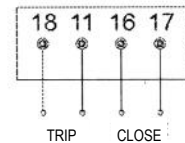


Part No. 2640D

Handle: Pistol-grip
Spring-return

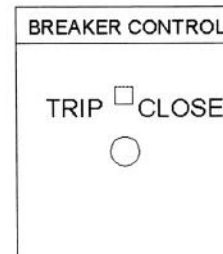

Code 118 - 3

DECK	CONTACTS	POS.		
		TRIP	normal	CLOSE
1	12-13			X
	15-16	X		
				X

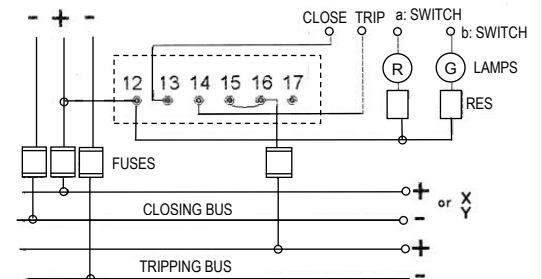


* Contacts 15-16 connected internally
in Normal Position

Part No. 2641D


Operate two breakers

Handle: Pistol-grip
Spring-return

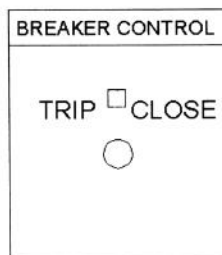

Code 118 - 3

DECK	CONTACTS	POS.		
		TRIP	normal	CLOSE
1	11-12	X		
	15-16	X		
				X

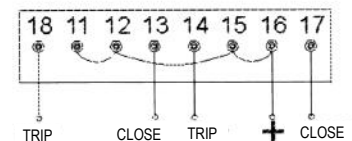

* Contacts 11-12 & 15-16 connected internally
in Normal Position

CIRCUIT BREAKER CONTROL SWITCHES


ESCUTCHEON

CONTACTING DIAGRAM

WIRING DIAGRAM


Part No. 2642D

Handle: Pistol-grip
Spring-return

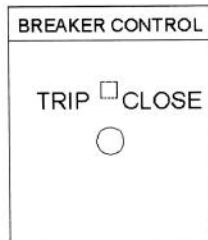

Code 118 - 3


DECK	CONTACTS	POS.			
		TRIP	nat	mac	CLOSE
1	11-12	X	X		
	15-16 14-17	X			X
2	22-23		X	X	
	26-27		X	X	

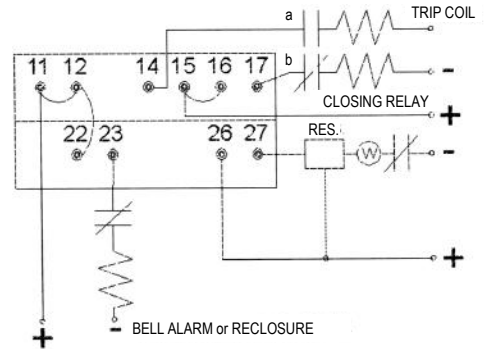

⊗ Contacts 15-16 connected internally in Normal Position


Part No. 2643D

Handle: Pistol-grip
Spring-return

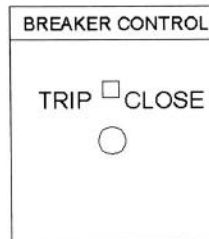

Code 118 - 3


DECK	CONTACTS	POS.			
		TRIP	nat	mac	CLOSE
1	12-13				X
	15-16 14-17	X			X
2	21-22	X	X		
	32-33		X	X	
3	36-37		X	X	

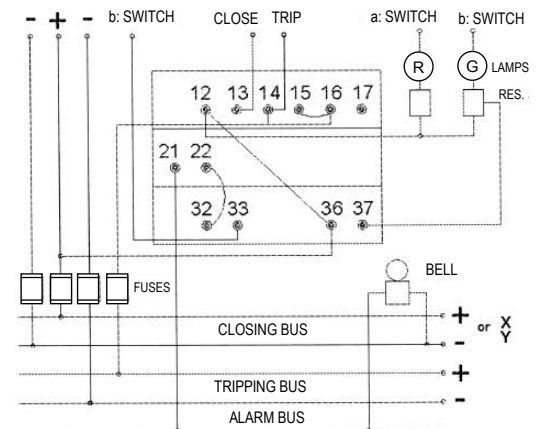

⊗ Contacts 15-16 connected internally in Normal Position

Part No. 2644D

Handle: Pistol-grip
Spring-return

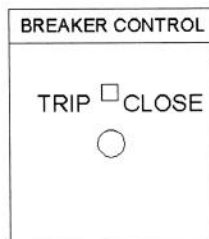

Code 118 - 3

DECK	CONTACTS	POS.			
		TRIP	nat	mac	CLOSE
1	11-18	X			
	16-17				X
2	21-22	X	X		
	25-26	X	X		
3	32-33		X	X	
	36-37		X	X	

Code 118 - 3

CIRCUIT BREAKER CONTROL SWITCHES


ESCUTCHEON

CONTACTING DIAGRAM

WIRING DIAGRAM

Part No. 2645D

Handle: Pistol-grip
Spring-return

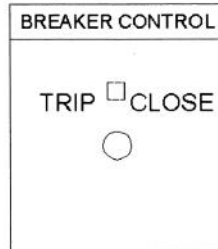


Code 118 - 3

DECK	CONTACTS	POS.			
		TRIP	nat	nbc	CLOSE
1	110-II-II-018	X			
	160-II-II-017				X
2	210-II-II-022		X	X	
	320-II-II-033			X	X
3	360-II-II-037			X	X
	410-II-II-042	X	X		
4	450-II-II-046	X	X		

Part No. 2646D

Handle: Pistol-grip
Spring-return

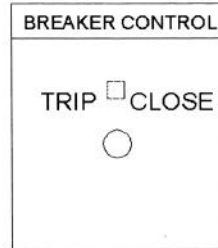


Code 118 - 3

DECK	CONTACTS	POS.			
		TRIP	nat	nbc	CLOSE
1	110-II-II-018	X			
	140-II-II-015	X			
2	210-II-II-022		X	X	
	260-II-II-027				X
3	320-II-II-033			X	X
	360-II-II-037			X	X
4	420-II-II-043			X	X
	460-II-II-047			X	X

Part No. 2650D

Handle: Pistol-grip
Spring-Return
Pull-To-Lock

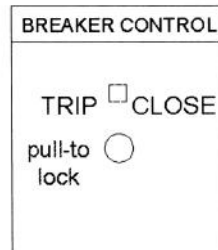


Code 118 - 4

DECK	CONTACTS	POSITIONS				
		PULL-TL	TRIP	nat	nbc	CLOSE
1	110-II-II-018	X	X			
	220-II-II-023					X
2	260-II-II-027					X
	310-II-II-035		X	X	X	X

Decks 1 & 3 are make-before-break

Part No. 2652D

Handle: Pistol-grip
Spring-Return
Pull-To-Lock

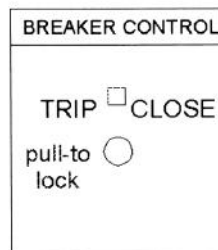

Code 118 - 4

DECK	CONTACTS	POSITIONS				
		PULL-TL	TRIP	nat	nbc	CLOSE
1	120-II-II-013					X
	160-II-II-017					X
2	210-II-II-022			X	X	
	250-II-II-026			X	X	
3	310-II-II-038	X	X			
	410-II-II-048	X	X			X
5	520-II-II-053				X	X
	560-II-II-057				X	X

Decks 3 & 4 are make-before-break

CIRCUIT BREAKER CONTROL SWITCHES

ESCUTCHEON


CONTACTING DIAGRAM

WIRING DIAGRAM

Part No. 2657D

UNIVERSAL
CIRCUIT

Handle: Pistol-grip
Spring-return

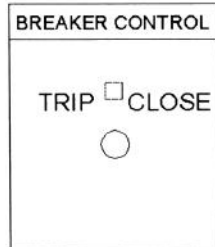


Code 118 - 3

DECK	CONTACTS	POS.			CLOSE
		TRIP	nat	nac	
1	12-11-11-013				X
	16-11-11-017				X
2	21-11-11-028	X			
	24-11-11-025	X			
3	31-11-11-032		X	X	
	35-11-11-036		X	X	
4	42-11-11-043			X	X
	46-11-11-047			X	X
5	51-11-11-052	X	X		
	55-11-11-056	X	X		

Part No. 2658D

UNIVERSAL
CIRCUIT

Handle: Pistol-grip
Spring-return
Pull-to-lock

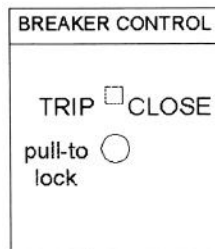

Code 118 - 4

DECK	CONTACTS	POSITIONS				CLOSE
		PULL-TL	TRIP	nat	nac	
1	12-11-11-013					X
	16-11-11-017					X
2	21-11-11-028		X			
	24-11-11-025		X			
3	33-11-11-034	X				
	37-11-11-038	X				
4	41-11-11-042			X	X	
	45-11-11-046			X	X	
5	52-11-11-053				X	X
	56-11-11-057				X	X
6	61-11-11-062		X	X		
	65-11-11-066		X	X		